ASSEMBLY INSTRUCTION

FVU- 2000

FRAMELESS GLASS DISPLAY SHOP SHOWCASE

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

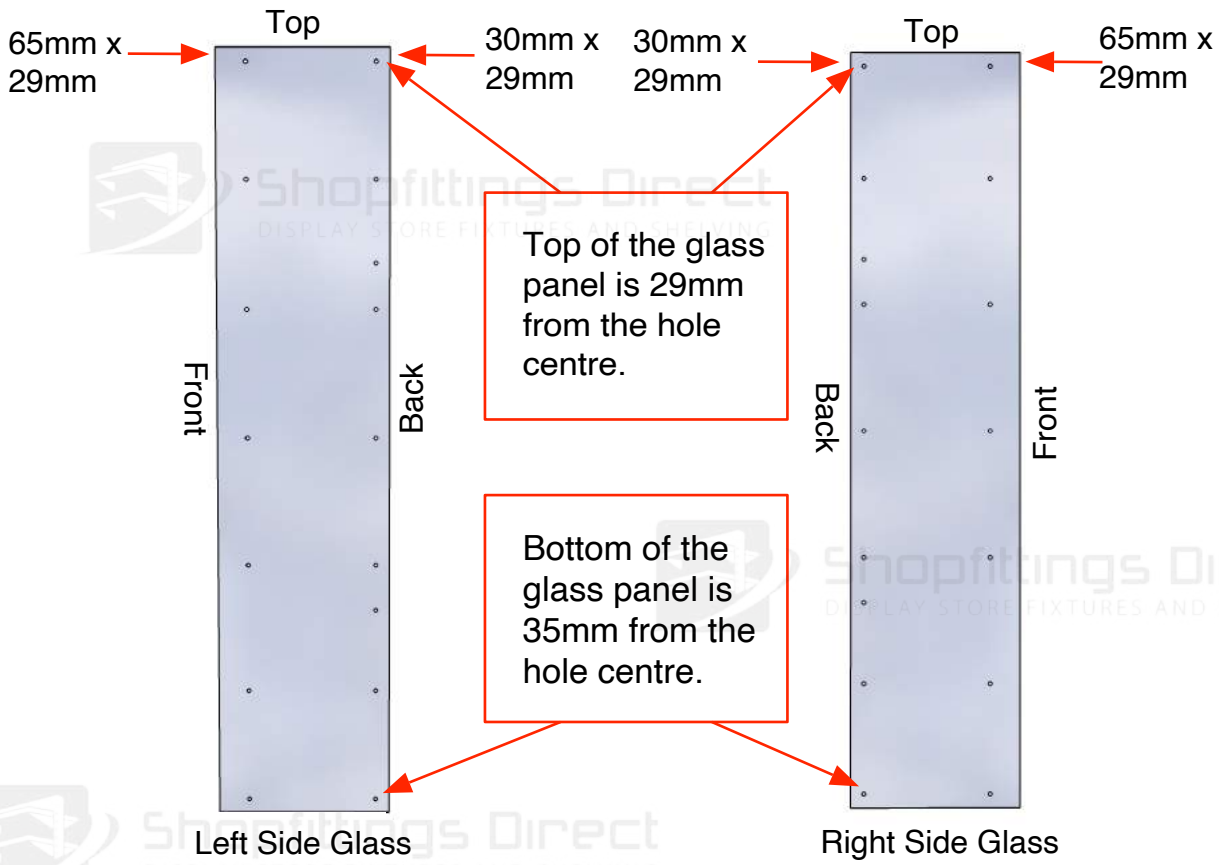

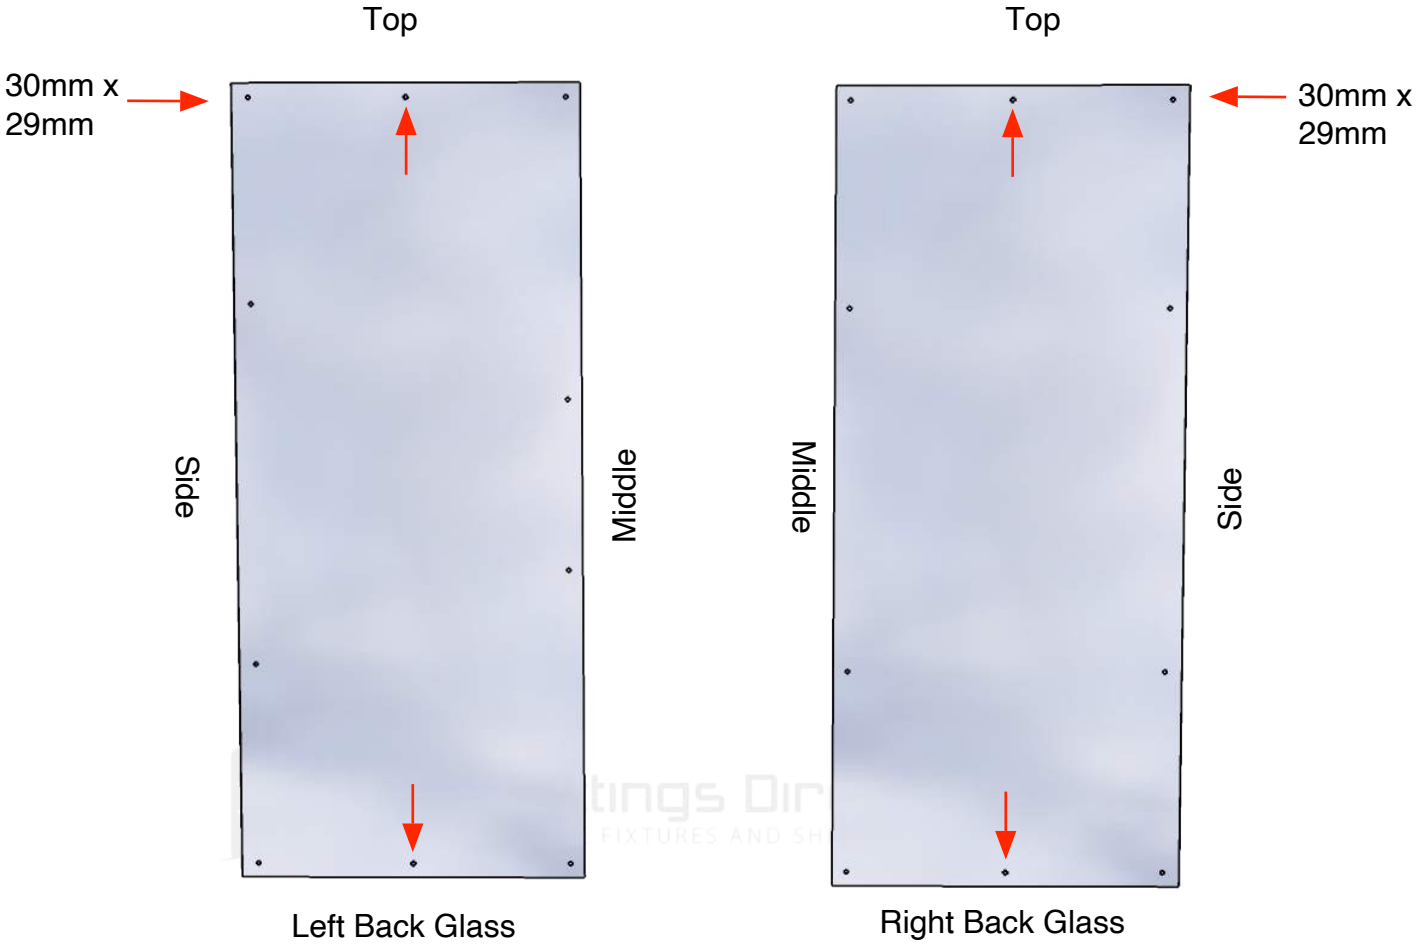

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

With the help of 2 people, carefully place the left side glass and left black glass

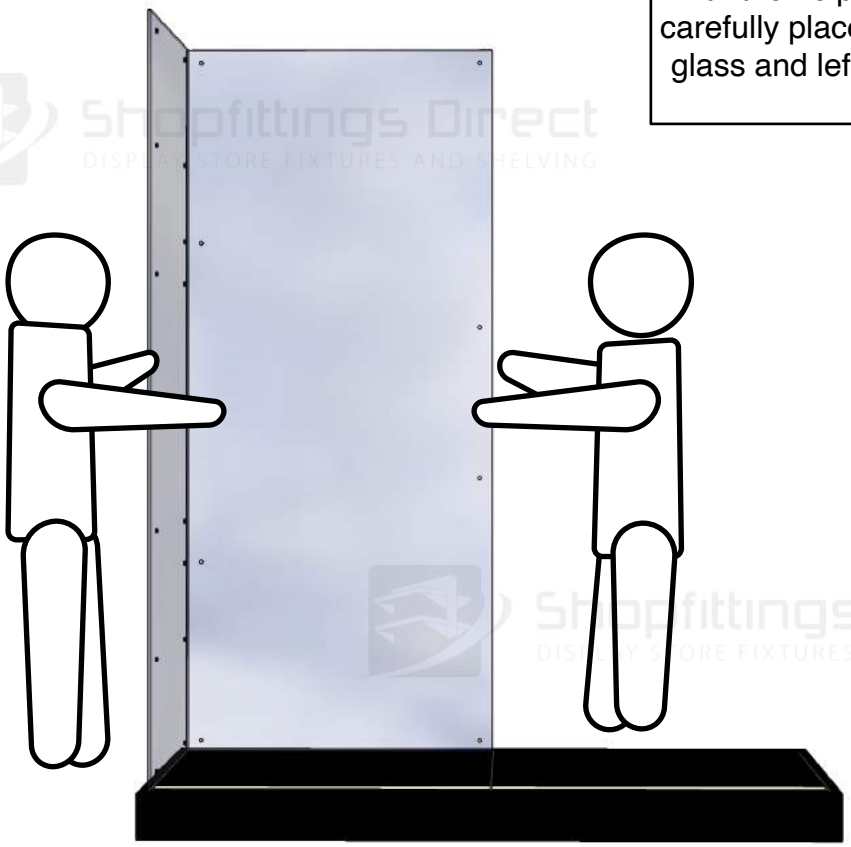

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

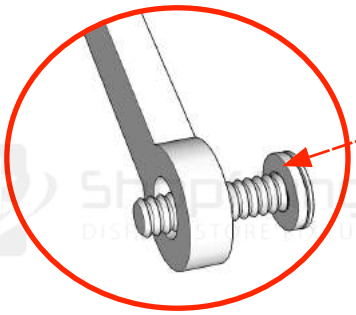

White nylon washer is always positioned on the outside of the glass panels.

Screw and tighten the brackets to the glass panels.

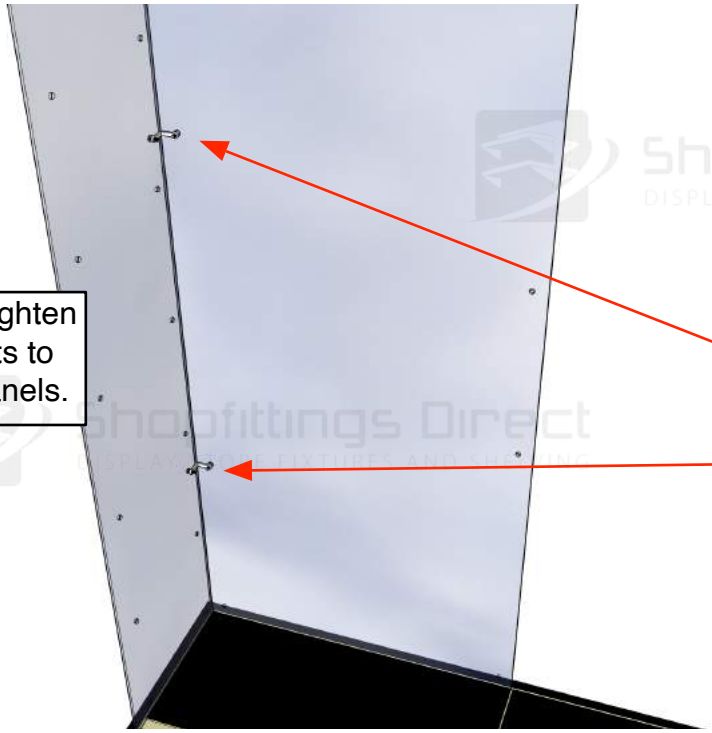

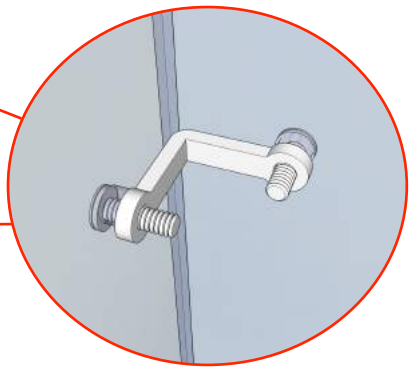

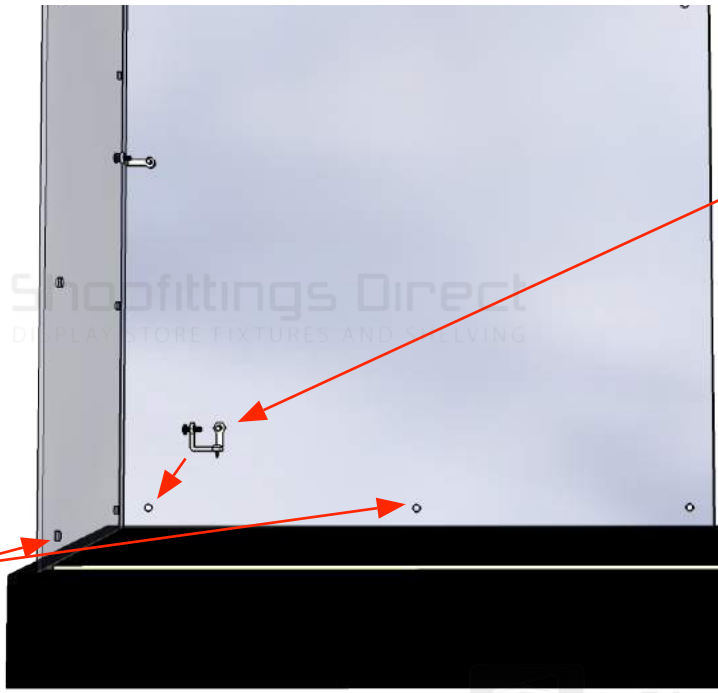

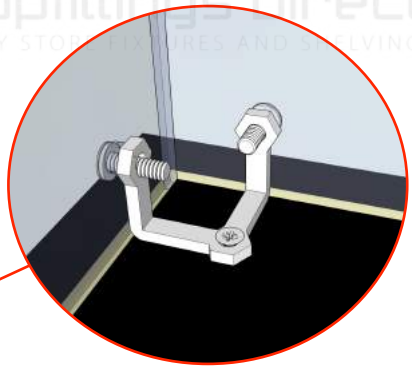

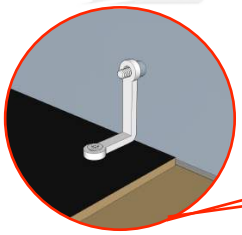

Self tapping timber screws are designed to bite in and screw in using a hand held screw driver or a cordless drill.

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

4

Carefully position the right side and back glass panels and repeat steps 2 and 3. Make sure to properly tighten all the screws

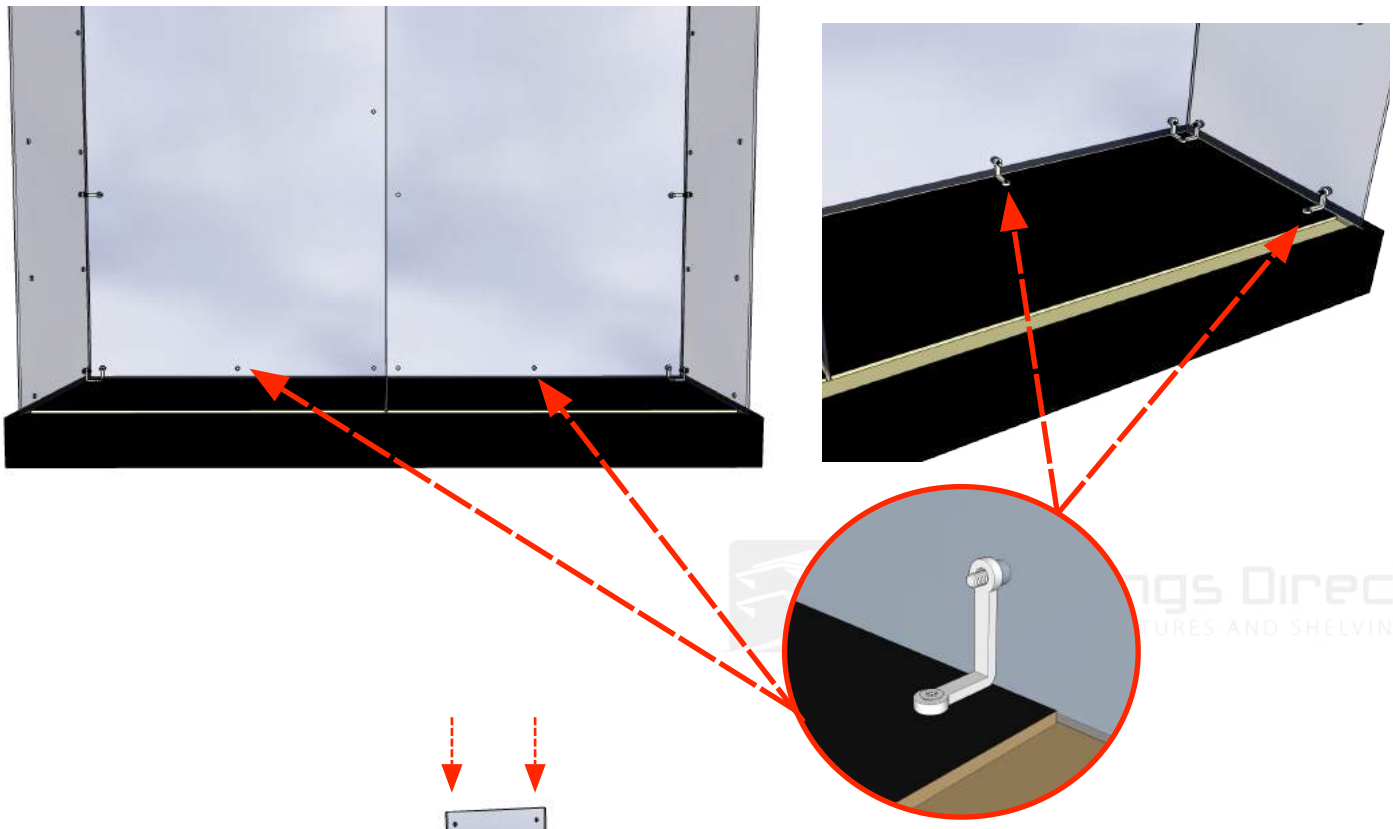

Put the middle glass. make sure that the holes align the left and right back glass.

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

5

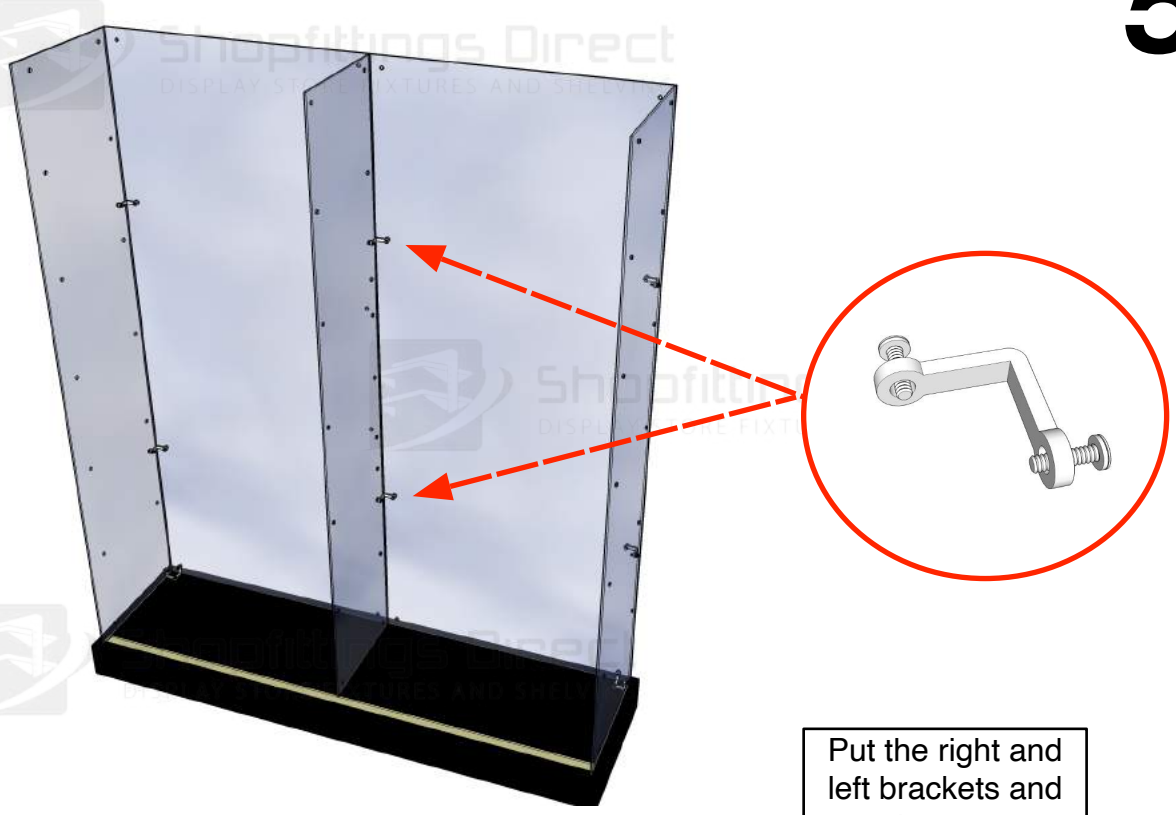

Put the right and left brackets and make sure to tighthen properly.

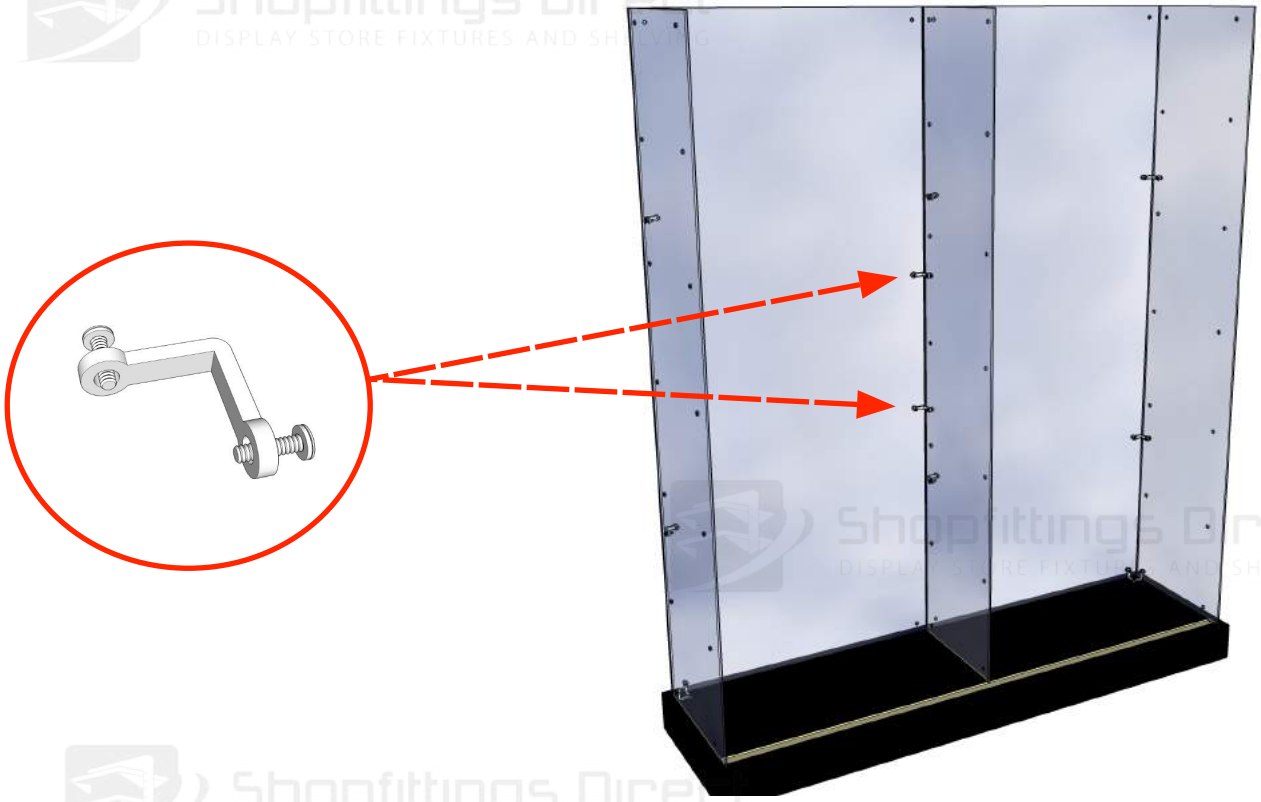

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

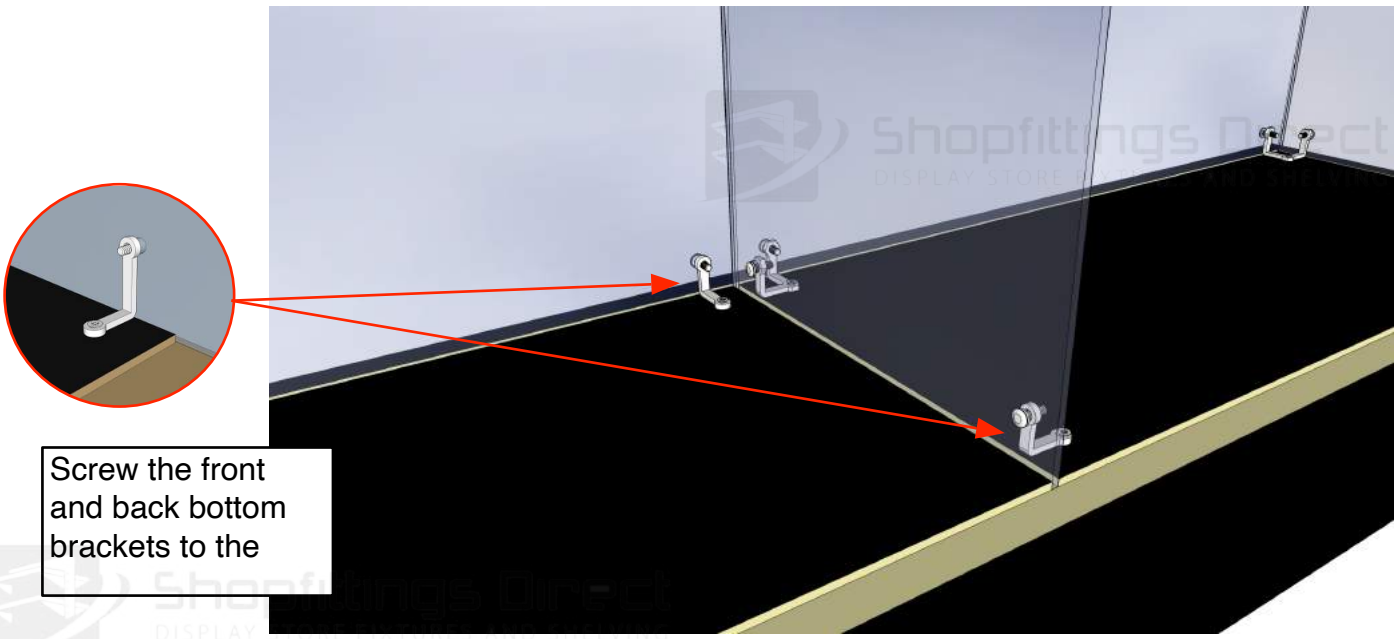

Screw the front and back bottom brackets to the

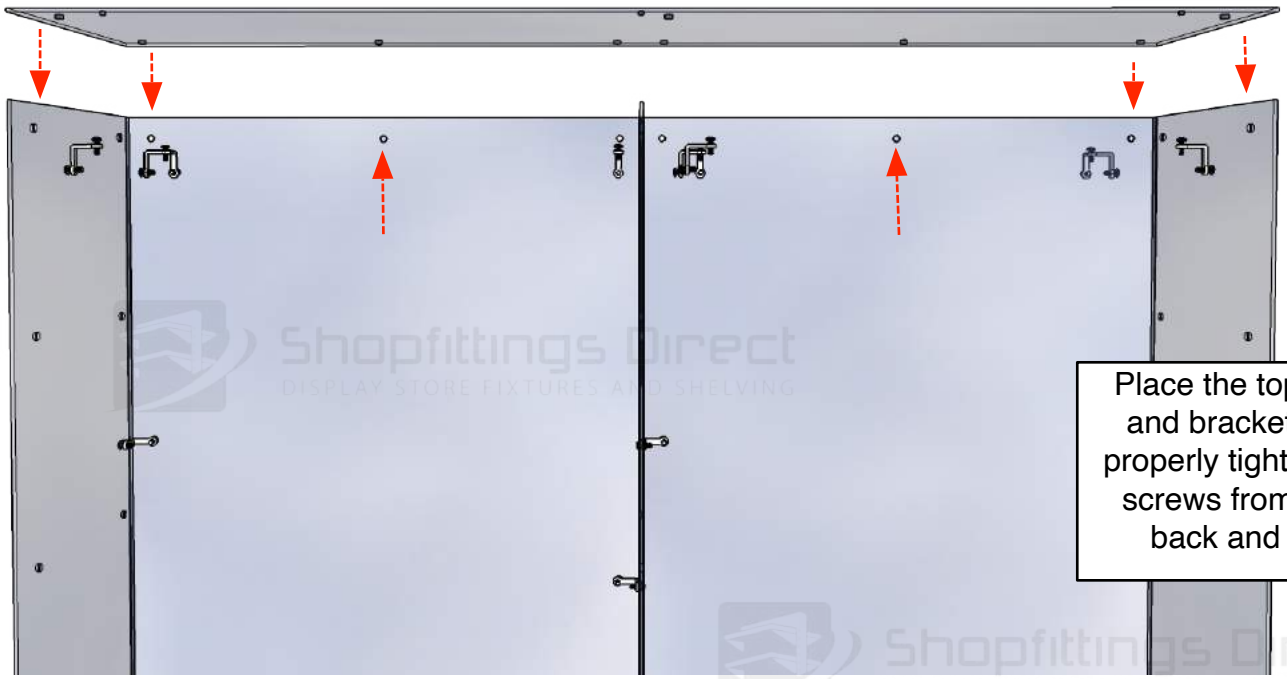

Place the top glass and brackets and properly tighthen the screws from front, back and side

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

Top View

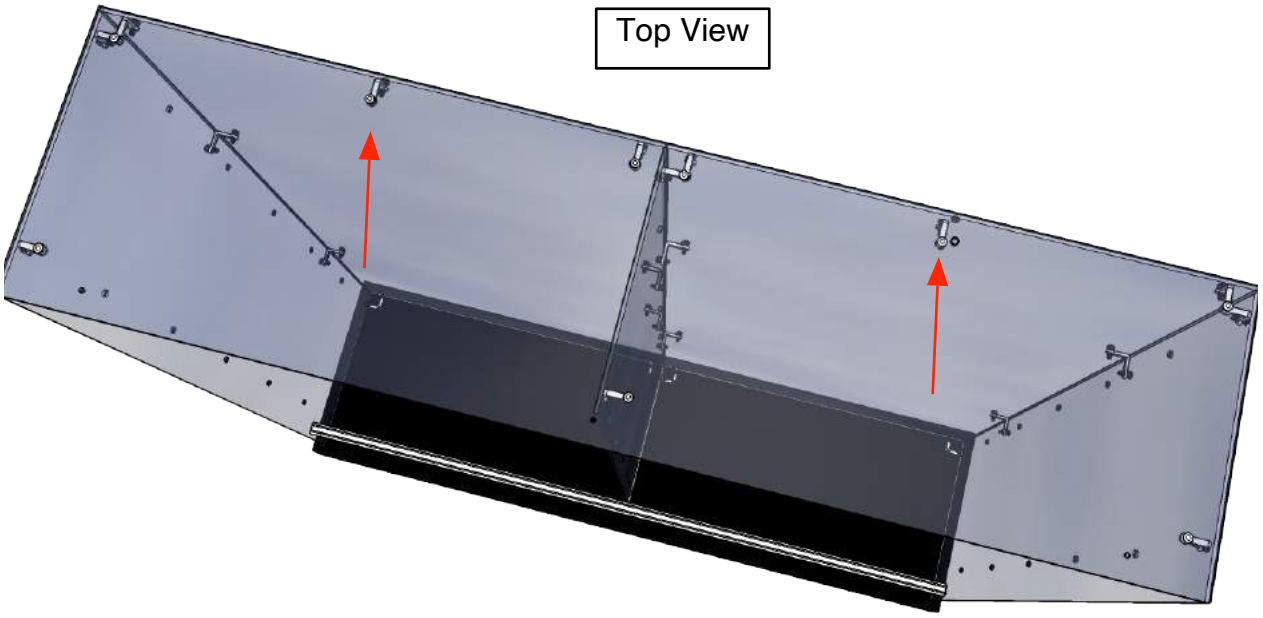

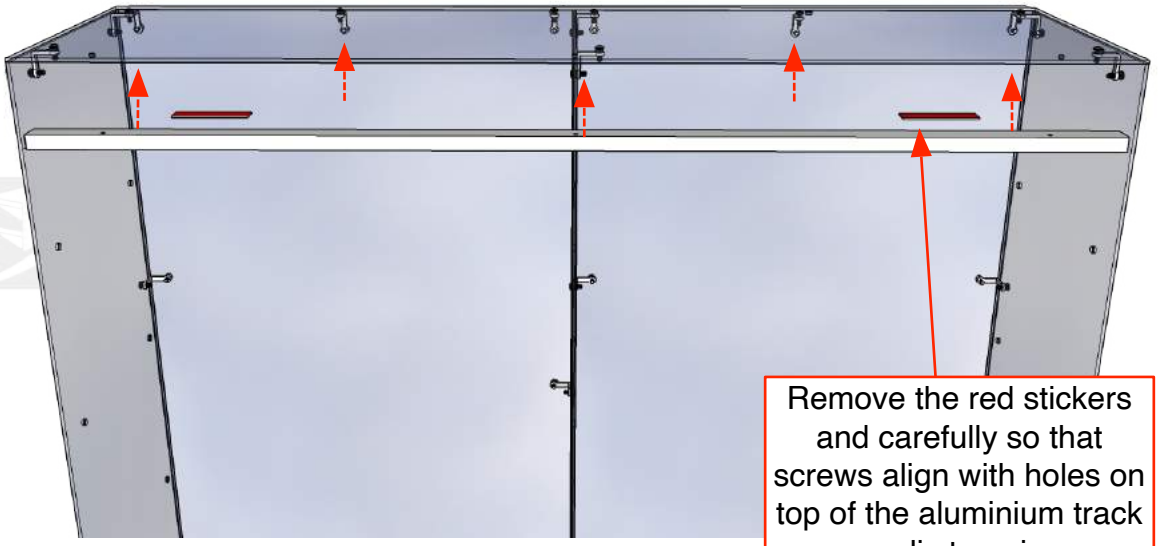

Remove the red stickers and carefully so that screws align with holes on top of the aluminium track as acrylic tape is very adhesive

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

Tighten 13mm high screws to properly lock the top rail

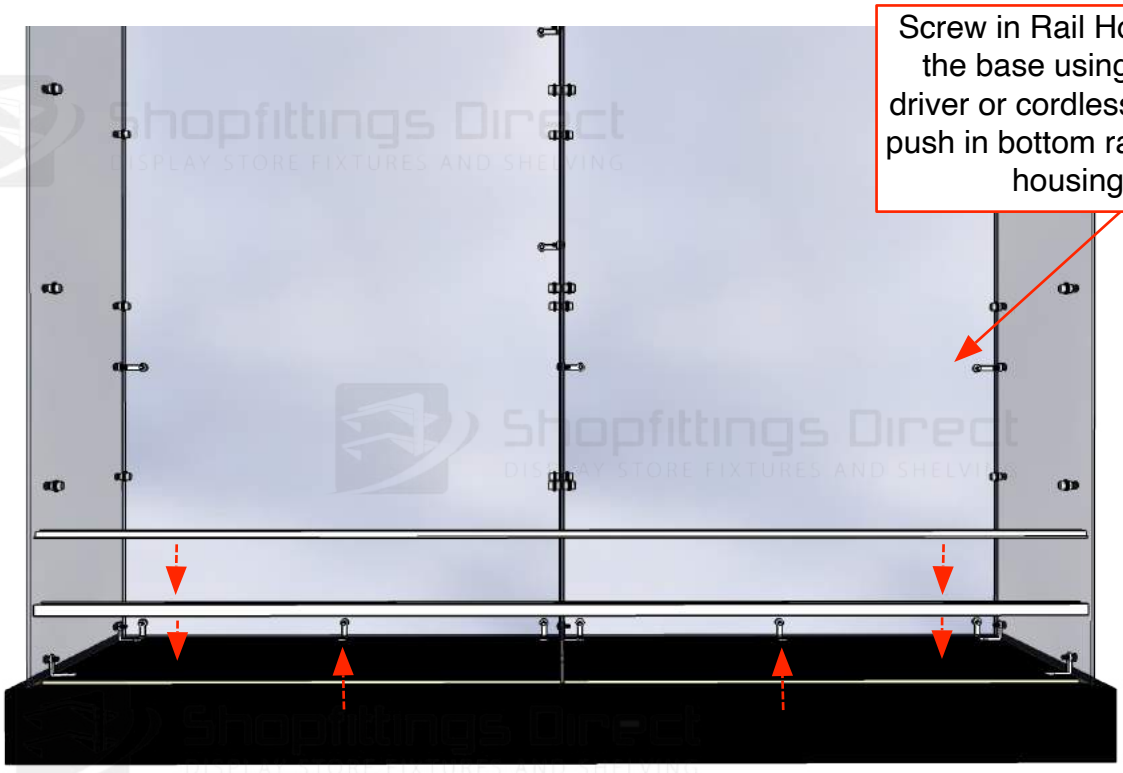

Screw in Rail Housing to the base using screw driver or cordless drill and push in bottom rail into rail housing.

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

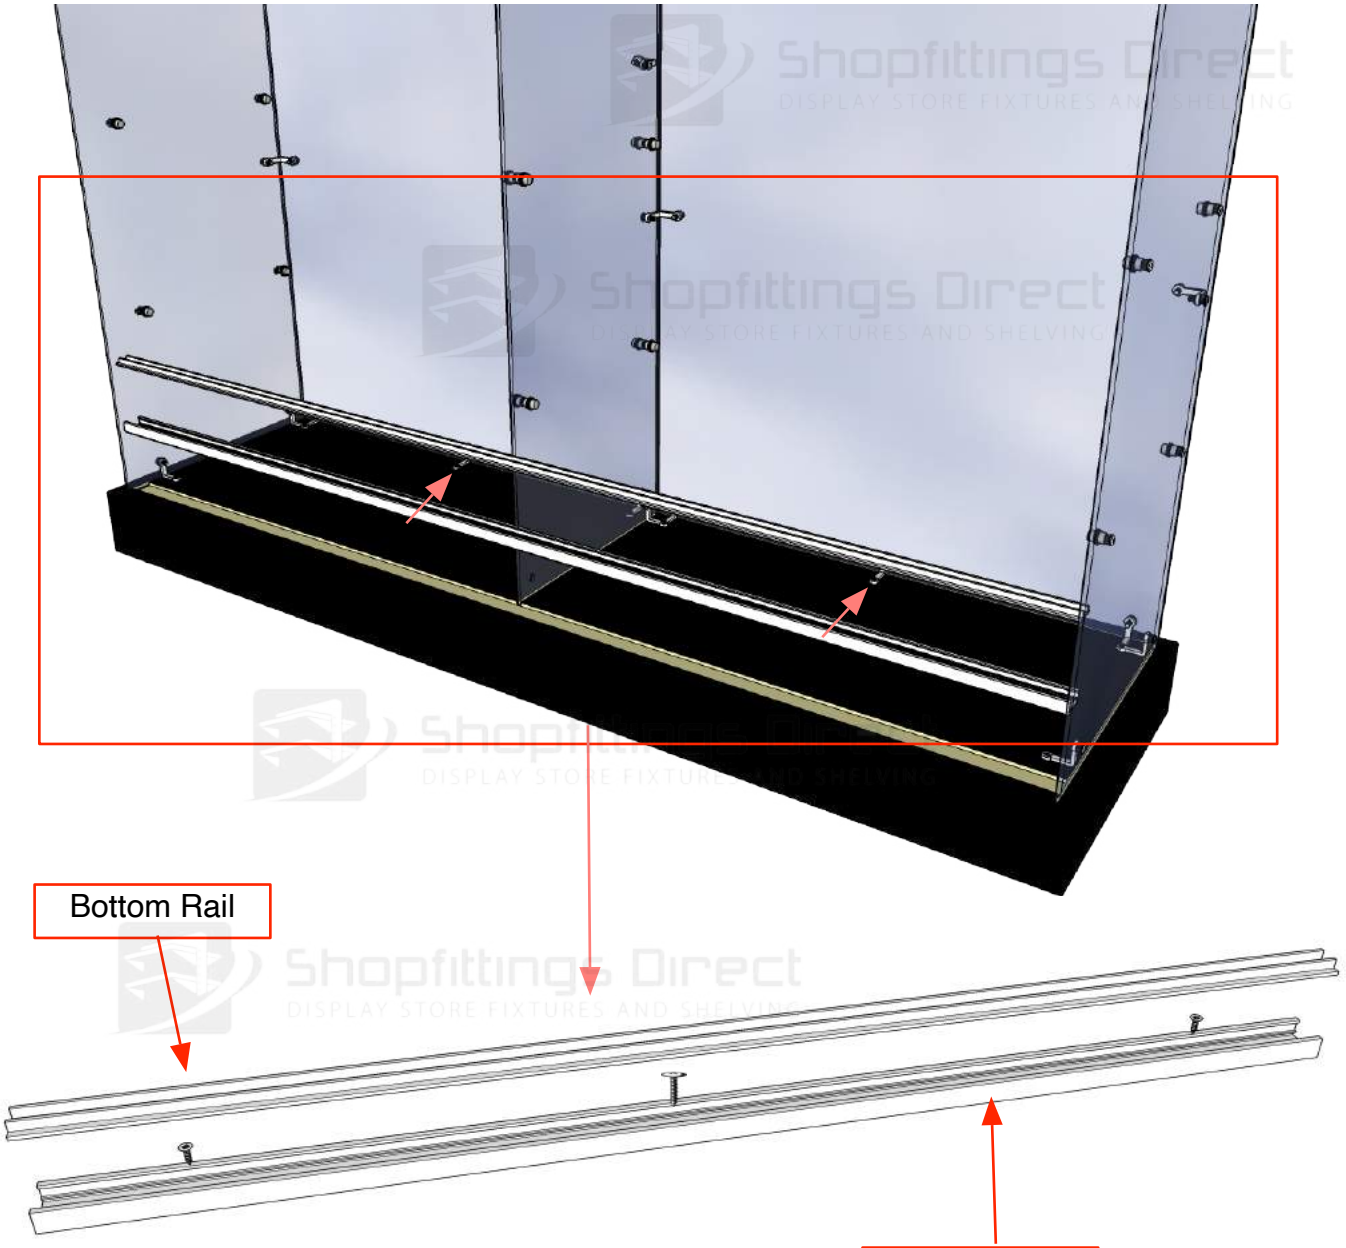

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

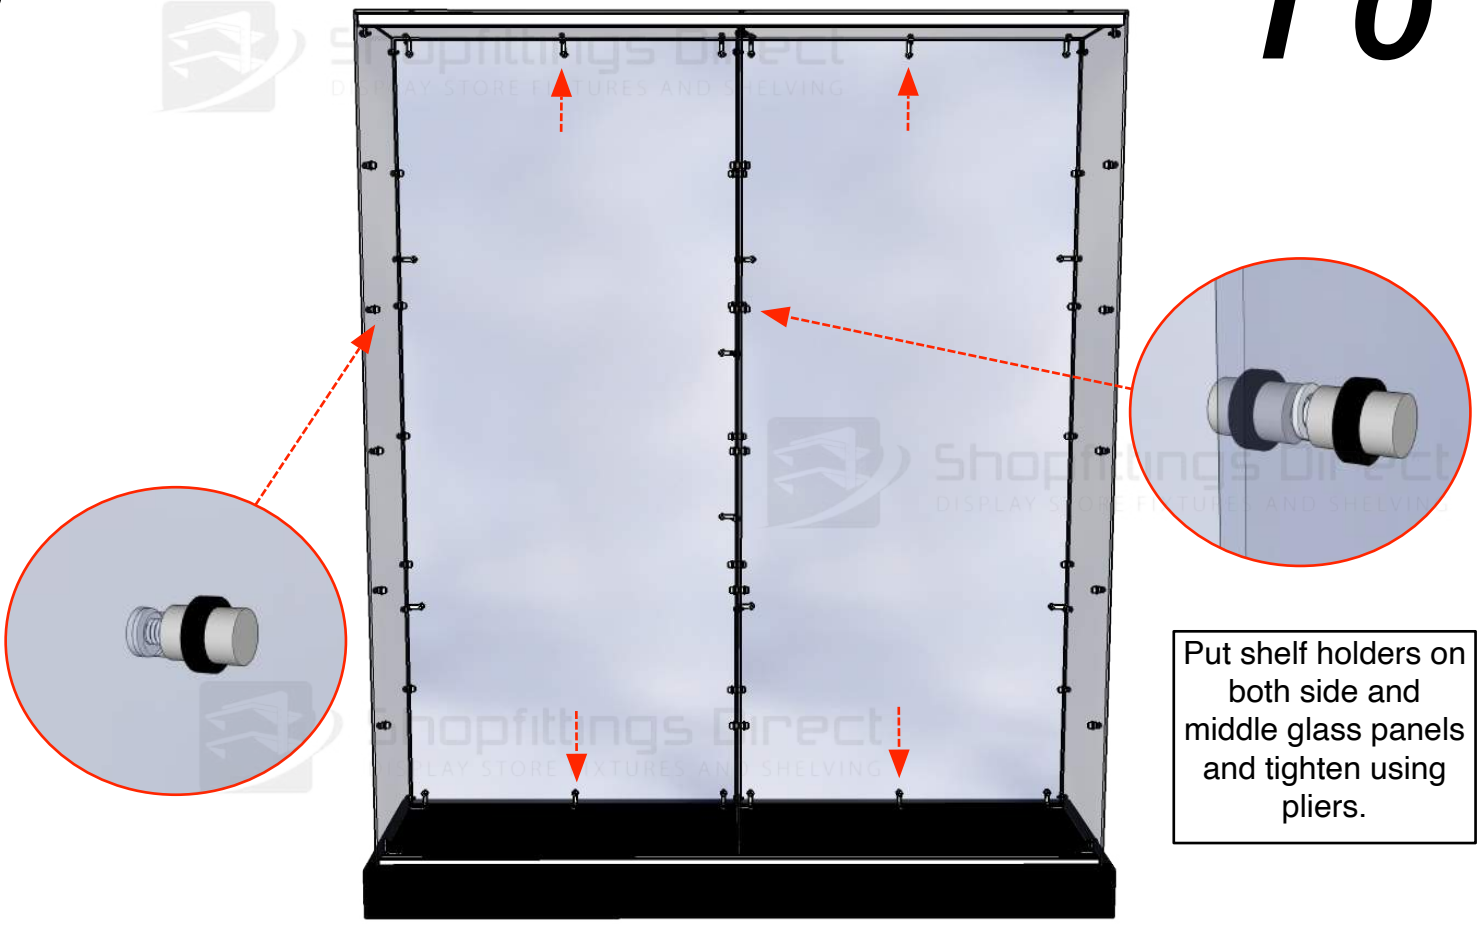

Put shelf holders on both side and middle glass panels and tighten using pliers.

Carefully position glass shelf levels onto shelf holders.

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

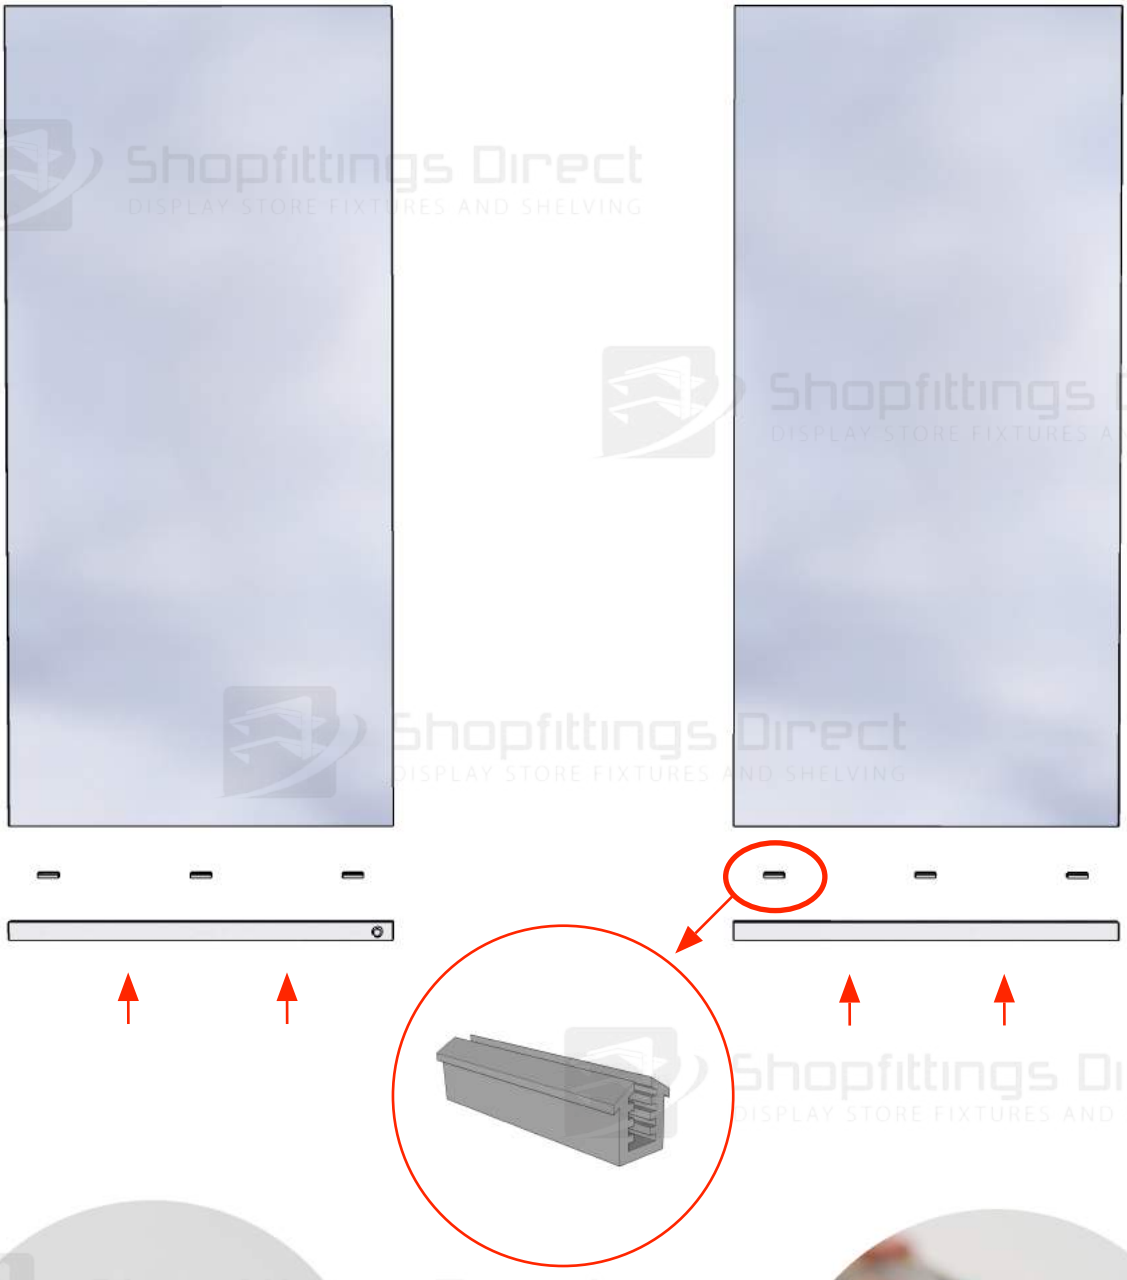

U-Shape Rubber

Position U rubber & track as per photo. Cushion door and tap with mallet (soft hammer).

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

Plastic Spacer

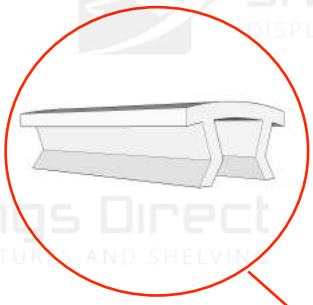

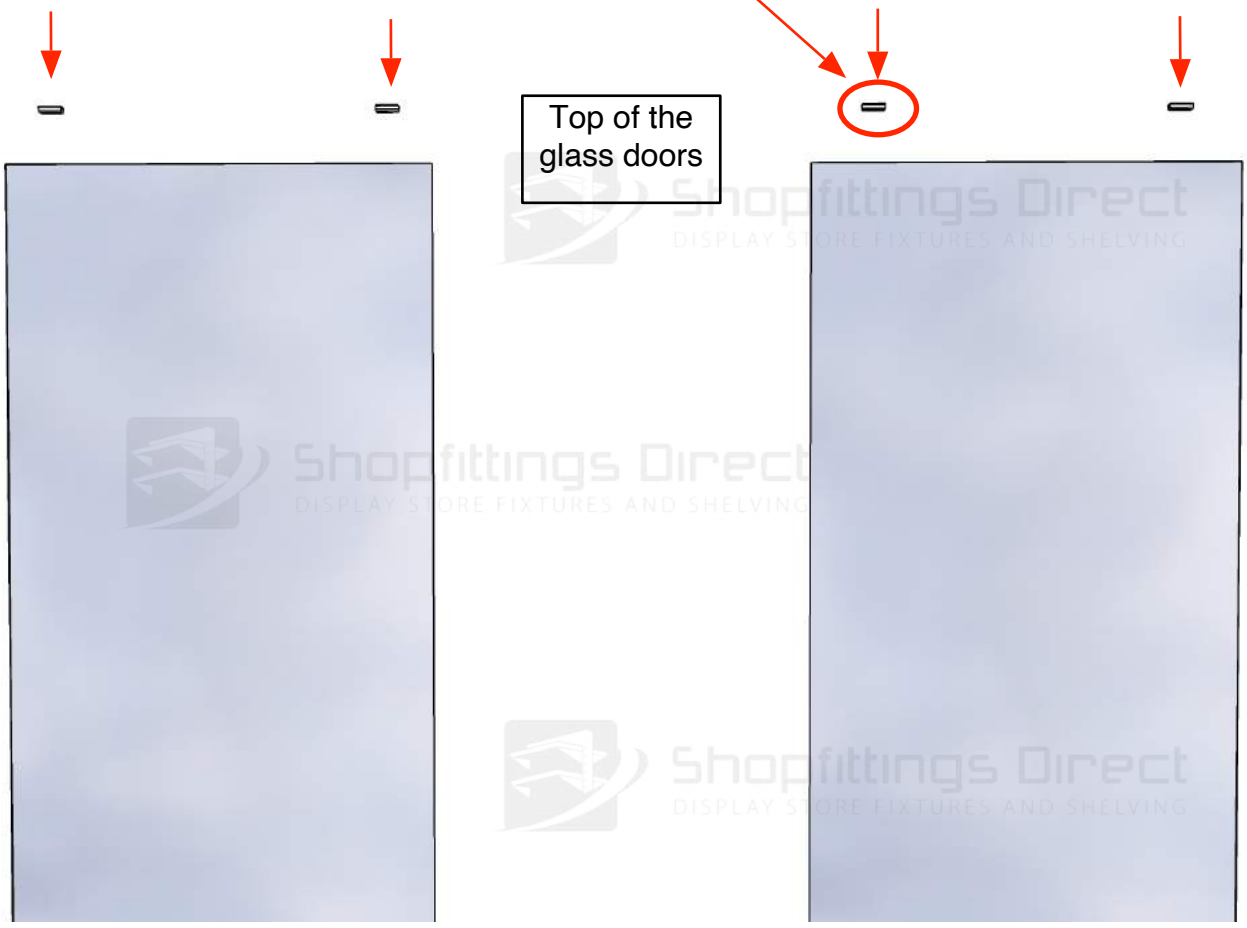

Top plastic spacer position 25mm from each on the top of the door.

Plastic spacer in place.

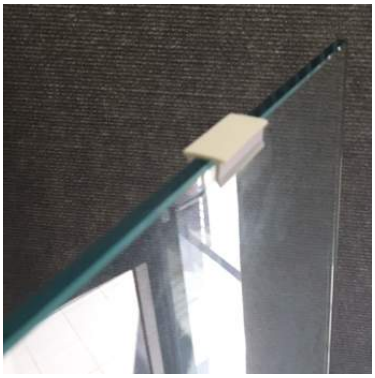

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

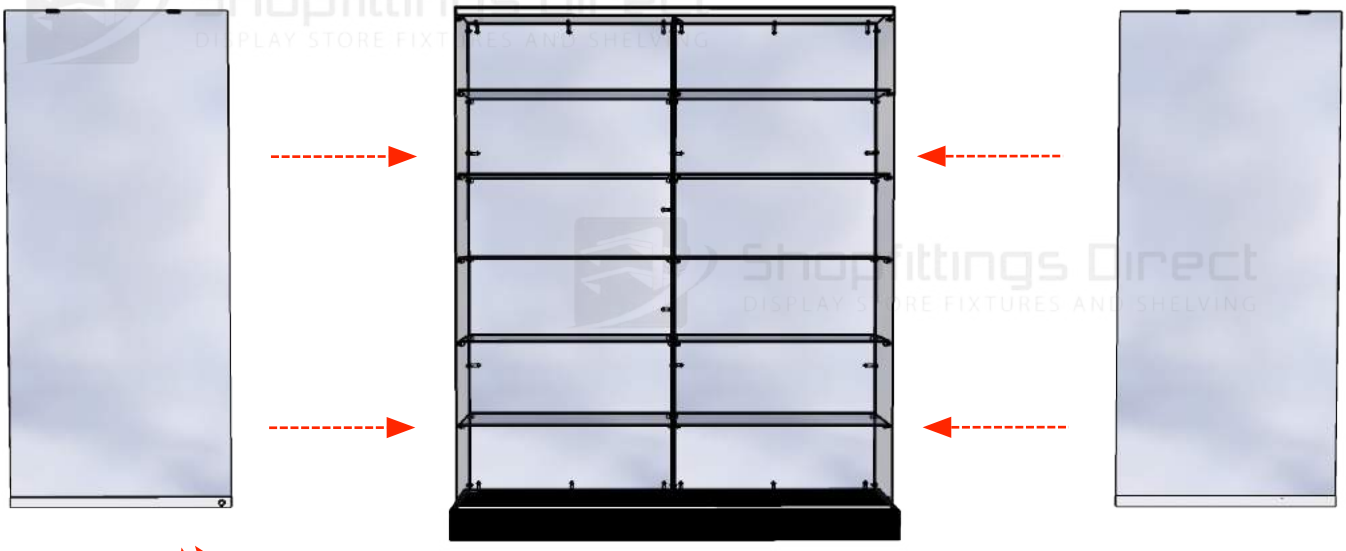

Insert the back door first then the front door with lock

Lock shown on the front of the track

Lock shown on the back of the door track

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd

Completed installation

SHOPFITTINGS DIRECT PTY LTD
Unit 1, 37 Rodeo Road
Gregory Hills NSW 2557

Ph: 02 9608 5122
Email: sales@shopfittingsdirect.com.au

The content, images and photographs within this document are protected by copyright laws,
COPYRIGHT © 2021 Shopfittings Direct Pty Ltd